

Sezione principale della tastiera PS2 con layout ITA

| Tasti   | Scan Code |          | Computer Z80NE                |    |       |    |         |    |
|---------|-----------|----------|-------------------------------|----|-------|----|---------|----|
|         | Down      | Up       | Normal                        |    | Shift |    | Control |    |
|         |           |          |                               |    |       |    |         |    |
| \       | 0E        | F0,0E    | \                             | 5C |       | 7C | FS      | 1C |
| 1       | 16        | F0,16    | 1                             | 31 | !     | 21 | NUL     | 00 |
| 2       | 1E        | F0,1E    | 2                             | 32 | "     | 22 | NUL     | 00 |
| 3       | 26        | F0,26    | 3                             | 33 | #     | 23 | NUL     | 00 |
| 4       | 25        | F0,25    | 4                             | 34 | \$    | 24 | NUL     | 00 |
| 5       | 2E        | F0,2E    | 5                             | 35 | %     | 25 | NUL     | 00 |
| 6       | 36        | F0,36    | 6                             | 36 | &     | 26 | NUL     | 00 |
| 7       | 3D        | F0,3D    | 7                             | 37 | /     | 2F | NUL     | 00 |
| 8       | 3E        | F0,3E    | 8                             | 38 | (     | 28 | NUL     | 00 |
| 9       | 46        | F0,46    | 9                             | 39 | )     | 29 | NUL     | 00 |
| 0       | 45        | F0,45    | 0                             | 30 | =     | 3D | NUL     | 00 |
| '       | 4E        | F0,4E    | '                             | 27 | ?     | 3F | NUL     | 00 |
| ì       | 55        | F0,55    | ^                             | 5E | ~     | 7E | RS      | 1E |
| BKSP    | 66        | F0,66    |                               | 08 |       | 08 |         | 08 |
| TAB     | 0D        | F0,0D    | LF                            | 0A | LF    | 0A | LF      | 0A |
| Q       | 15        | F0,15    | q                             | 71 | Q     | 51 | DC1     | 11 |
| W       | 1D        | F0,1D    | w                             | 77 | W     | 57 | ETB     | 17 |
| E       | 24        | F0,24    | e                             | 65 | E     | 45 | ENQ     | 05 |
| R       | 2D        | F0,2D    | r                             | 72 | R     | 52 | DC2     | 12 |
| T       | 2C        | F0,2C    | t                             | 74 | T     | 54 | DC4     | 14 |
| Y       | 35        | F0,35    | y                             | 79 | Y     | 59 | EM      | 19 |
| U       | 3C        | F0,3C    | u                             | 75 | U     | 55 | NAK     | 15 |
| I       | 43        | F0,43    | i                             | 69 | I     | 49 | HT      | 09 |
| O       | 44        | F0,44    | o                             | 6F | O     | 4F | SI      | 0F |
| P       | 4D        | F0,4D    | p                             | 70 | P     | 50 | DLE     | 10 |
| è       | 54        | F0,54    | [                             | 5B | {     | 7B | ESC     | 1B |
| +       | 5B        | F0,5B    | ]                             | 5D | }     | 7D | GS      | 1D |
| ENTER   | 5A        | F0,5A    | ENTER                         | 0D | ENTER | 0D | CR      | 0D |
| CAPS    | 58        | F0,58    | Emula il tasto SHIFT LOCK     |    |       |    |         |    |
| A       | 1C        | F0,1C    | a                             | 61 | A     | 41 | SOH     | 01 |
| S       | 1B        | F0,1B    | s                             | 73 | S     | 53 | DC3     | 13 |
| D       | 23        | F0,23    | d                             | 64 | D     | 44 | EOT     | 04 |
| F       | 2B        | F0,2B    | f                             | 66 | F     | 46 | ACK     | 06 |
| G       | 34        | F0,34    | g                             | 67 | G     | 47 | BEL     | 07 |
| H       | 33        | F0,33    | h                             | 68 | H     | 48 | BS      | 08 |
| J       | 3B        | F0,3B    | j                             | 6A | J     | 4A | LF      | 0A |
| K       | 42        | F0,42    | k                             | 6B | K     | 4B | VT      | 0B |
| L       | 4B        | F0,4B    | l                             | 6C | L     | 4C | FF      | 0C |
| ò       | 4C        | F0,4C    | @                             | 40 | ^     | 60 | NUL     | 00 |
| à       | 52        | F0,52    | +                             | 2B | *     | 2A | NUL     | 00 |
| ù       | 5D        | F0,5D    | LF                            | 0A | LF    | 0A | LF      | 0A |
| L SHIFT | 12        | F0,12    | NUL                           | 00 | NUL   | 00 | NUL     | 00 |
| <       | 61        | F0,61    | <                             | 3C | >     | 3E | NUL     | 00 |
| Z       | 1A        | F0,1A    | z                             | 7A | Z     | 5A | SUB     | 1A |
| X       | 22        | F0,22    | x                             | 78 | X     | 58 | CAN     | 18 |
| C       | 21        | F0,21    | c                             | 63 | C     | 43 | ETX     | 03 |
| V       | 2A        | F0,2A    | v                             | 76 | V     | 56 | SYN     | 16 |
| B       | 32        | F0,32    | b                             | 62 | B     | 42 | STX     | 02 |
| N       | 31        | F0,31    | n                             | 6E | N     | 4E | SO      | 0E |
| M       | 3A        | F0,3A    | m                             | 6D | M     | 4D | CR      | 0D |
| ,       | 41        | F0,41    | ,                             | 2C | :     | 3B | NUL     | 00 |
| .       | 49        | F0,49    | .                             | 2E | ;     | 3A | NUL     | 00 |
| -       | 4A        | F0,4A    | -                             | 2D | '     | 5F | NUL     | 00 |
| R SHIFT | 59        | F0,59    | NUL                           | 00 | NUL   | 00 | NUL     | 00 |
| L CTRL  | 14        | F0,14    | NUL                           | 00 | NUL   | 00 | NUL     | 00 |
| L ALT   | 11        | F0,11    | Emula il tasto BREAK sinistro |    |       |    |         |    |
| SPACE   | 29        | F0,29    | SPACE                         | 20 | SPACE | 20 | SPACE   | 20 |
| R ALT   | E0,11     | E0,F0,11 | Emula il tasto BREAK destro   |    |       |    |         |    |
| R CTRL  | E0,14     | E0,F0,14 | NUL                           | 00 | NUL   | 00 | NUL     | 00 |

Tastierino numerico (sempre attivo)

| Tasti | Scan Code |          | Computer Z80NE |    |       |    |         |    |
|-------|-----------|----------|----------------|----|-------|----|---------|----|
|       | Down      | Up       | Normal         |    | Shift |    | Control |    |
|       |           |          |                |    |       |    |         |    |
| /     | E0,4A     | E0,F0,4A | /              | 2F | /     | 2F | NUL     | 00 |
| *     | 7C        | F0,7C    | *              | 2A | *     | 2A | NUL     | 00 |
| -     | 7B        | F0,7B    | -              | 2D | -     | 2D | NUL     | 00 |
| 7     | 6C        | F0,6C    | 7              | 37 | 7     | 37 | NUL     | 00 |
| 8     | 75        | F0,75    | 8              | 38 | 8     | 38 | NUL     | 00 |
| 9     | 7D        | F0,7D    | 9              | 39 | 9     | 39 | NUL     | 00 |
| +     | 79        | F0,79    | +              | 2B | +     | 2B | NUL     | 00 |
| 4     | 6B        | F0,6B    | 4              | 34 | 4     | 34 | NUL     | 00 |
| 5     | 73        | F0,73    | 5              | 35 | 5     | 35 | NUL     | 00 |
| 6     | 74        | F0,74    | 6              | 36 | 6     | 36 | NUL     | 00 |
| 1     | 69        | F0,69    | 1              | 31 | 1     | 31 | NUL     | 00 |
| 2     | 72        | F0,72    | 2              | 32 | 2     | 32 | NUL     | 00 |
| 3     | 7A        | F0,7A    | 3              | 33 | 3     | 33 | NUL     | 00 |
| ENTER | E0,5A     | E0,F0,5A | ENTER          | 0D | ENTER | 0D | ENTER   | 0D |
| 0     | 70        | F0,70    | 0              | 30 | 0     | 30 | NUL     | 00 |
| .     | 71        | F0,71    | .              | 2E | .     | 2E | NUL     | 00 |

Altri tasti

| Tasti | Scan Code |          | Computer Z80NE |    |       |    |         |    |
|-------|-----------|----------|----------------|----|-------|----|---------|----|
|       | Down      | Up       | Normal         |    | Shift |    | Control |    |
|       |           |          |                |    |       |    |         |    |
| ESC   | 76        | F0,76    | ESC            | 1B | ESC   | 1B | ESC     | 1B |
| DEL   | E0,71     | E0,F0,71 | DEL            | 7F | DEL   | 7F | DEL     | 7F |

Sezione principale della tastiera PS2 con layout USA

| Tasti   | Scan Code |          | Computer Z80NE                |    |       |    |         |    |
|---------|-----------|----------|-------------------------------|----|-------|----|---------|----|
|         | Down      | Up       | Normal                        |    | Shift |    | Control |    |
|         |           |          |                               |    |       |    |         |    |
| `       | 0E        | F0,0E    | `                             | 60 | ~     | 7E | RS      | 1E |
| 1       | 16        | F0,16    | 1                             | 31 | !     | 21 | NUL     | 00 |
| 2       | 1E        | F0,1E    | 2                             | 32 | @     | 40 | NUL     | 00 |
| 3       | 26        | F0,26    | 3                             | 33 | #     | 23 | NUL     | 00 |
| 4       | 25        | F0,25    | 4                             | 34 | \$    | 24 | NUL     | 00 |
| 5       | 2E        | F0,2E    | 5                             | 35 | %     | 25 | NUL     | 00 |
| 6       | 36        | F0,36    | 6                             | 36 | ^     | 5E | NUL     | 00 |
| 7       | 3D        | F0,3D    | 7                             | 37 | &     | 26 | NUL     | 00 |
| 8       | 3E        | F0,3E    | 8                             | 38 | *     | 2A | NUL     | 00 |
| 9       | 46        | F0,46    | 9                             | 39 | (     | 28 | NUL     | 00 |
| 0       | 45        | F0,45    | 0                             | 30 | )     | 29 | NUL     | 00 |
| -       | 4E        | F0,4E    | -                             | 2D | _     | 5F | NUL     | 00 |
| =       | 55        | F0,55    | =                             | 3D | +     | 2B | NUL     | 00 |
| BKSP    | 66        | F0,66    |                               | 08 |       | 08 |         | 08 |
| TAB     | 0D        | F0,0D    | LF                            | 0A | LF    | 0A | LF      | 0A |
| Q       | 15        | F0,15    | q                             | 71 | Q     | 51 | DC1     | 11 |
| W       | 1D        | F0,1D    | w                             | 77 | W     | 57 | ETB     | 17 |
| E       | 24        | F0,24    | e                             | 65 | E     | 45 | ENQ     | 05 |
| R       | 2D        | F0,2D    | r                             | 72 | R     | 52 | DC2     | 12 |
| T       | 2C        | F0,2C    | t                             | 74 | T     | 54 | DC4     | 14 |
| Y       | 35        | F0,35    | y                             | 79 | Y     | 59 | EM      | 19 |
| U       | 3C        | F0,3C    | u                             | 75 | U     | 55 | NAK     | 15 |
| I       | 43        | F0,43    | i                             | 69 | I     | 49 | HT      | 09 |
| O       | 44        | F0,44    | o                             | 6F | O     | 4F | SI      | 0F |
| P       | 4D        | F0,4D    | p                             | 70 | P     | 50 | DLE     | 10 |
| [       | 54        | F0,54    | [                             | 5B | {     | 7B | ESC     | 1B |
| ]       | 5B        | F0,5B    | ]                             | 5D | }     | 7D | GS      | 1D |
| \       | 5D        | F0,5D    | \                             | 5C |       | 7C | FS      | 1C |
| ENTER   | 5A        | F0,5A    | ENTER                         | 0D | ENTER | 0D | CR      | 0D |
| CAPS    | 58        | F0,58    | Emula il tasto SHIFT LOCK     |    |       |    |         |    |
| A       | 1C        | F0,1C    | a                             | 61 | A     | 41 | SOH     | 01 |
| S       | 1B        | F0,1B    | s                             | 73 | S     | 53 | DC3     | 13 |
| D       | 23        | F0,23    | d                             | 64 | D     | 44 | EOT     | 04 |
| F       | 2B        | F0,2B    | f                             | 66 | F     | 46 | ACK     | 06 |
| G       | 34        | F0,34    | g                             | 67 | G     | 47 | BEL     | 07 |
| H       | 33        | F0,33    | h                             | 68 | H     | 48 | BS      | 08 |
| J       | 3B        | F0,3B    | j                             | 6A | J     | 4A | LF      | 0A |
| K       | 42        | F0,42    | k                             | 6B | K     | 4B | VT      | 0B |
| L       | 4B        | F0,4B    | l                             | 6C | L     | 4C | FF      | 0C |
| ;       | 4C        | F0,4C    | ;                             | 3B | :     | 3A | NUL     | 00 |
| '       | 52        | F0,52    | '                             | 27 | "     | 22 | NUL     | 00 |
| L SHIFT | 12        | F0,12    | NUL                           | 00 | NUL   | 00 | NUL     | 00 |
| Z       | 1A        | F0,1A    | z                             | 7A | Z     | 5A | SUB     | 1A |
| X       | 22        | F0,22    | x                             | 78 | X     | 58 | CAN     | 18 |
| C       | 21        | F0,21    | c                             | 63 | C     | 43 | ETX     | 03 |
| V       | 2A        | F0,2A    | v                             | 76 | V     | 56 | SYN     | 16 |
| B       | 32        | F0,32    | b                             | 62 | B     | 42 | STX     | 02 |
| N       | 31        | F0,31    | n                             | 6E | N     | 4E | SO      | 0E |
| M       | 3A        | F0,3A    | m                             | 6D | M     | 4D | CR      | 0D |
| ,       | 41        | F0,41    | ,                             | 2C | <     | 3C | NUL     | 00 |
| .       | 49        | F0,49    | .                             | 2E | >     | 3E | NUL     | 00 |
| /       | 4A        | F0,4A    | /                             | 2F | ?     | 3F | NUL     | 00 |
| R SHIFT | 59        | F0,59    | NUL                           | 00 | NUL   | 00 | NUL     | 00 |
| L CTRL  | 14        | F0,14    | NUL                           | 00 | NUL   | 00 | NUL     | 00 |
| L ALT   | 11        | F0,11    | Emula il tasto BREAK sinistro |    |       |    |         |    |
| SPACE   | 29        | F0,29    | SPACE                         | 20 | SPACE | 20 | SPACE   | 20 |
| R ALT   | E0,11     | E0,F0,11 | Emula il tasto BREAK destro   |    |       |    |         |    |
| R CTRL  | E0,14     | E0,F0,14 | NUL                           | 00 | NUL   | 00 | NUL     | 00 |

Tastierino numerico (sempre attivo)

| Tasti | Scan Code |          | Computer Z80NE |    |       |    |         |    |
|-------|-----------|----------|----------------|----|-------|----|---------|----|
|       | Down      | Up       | Normal         |    | Shift |    | Control |    |
|       |           |          |                |    |       |    |         |    |
| /     | E0,4A     | E0,F0,4A | /              | 2F | /     | 2F | NUL     | 00 |
| *     | 7C        | F0,7C    | *              | 2A | *     | 2A | NUL     | 00 |
| -     | 7B        | F0,7B    | -              | 2D | -     | 2D | NUL     | 00 |
| 7     | 6C        | F0,6C    | 7              | 37 | 7     | 37 | NUL     | 00 |
| 8     | 75        | F0,75    | 8              | 38 | 8     | 38 | NUL     | 00 |
| 9     | 7D        | F0,7D    | 9              | 39 | 9     | 39 | NUL     | 00 |
| +     | 79        | F0,79    | +              | 2B | +     | 2B | NUL     | 00 |
| 4     | 6B        | F0,6B    | 4              | 34 | 4     | 34 | NUL     | 00 |
| 5     | 73        | F0,73    | 5              | 35 | 5     | 35 | NUL     | 00 |
| 6     | 74        | F0,74    | 6              | 36 | 6     | 36 | NUL     | 00 |
| 1     | 69        | F0,69    | 1              | 31 | 1     | 31 | NUL     | 00 |
| 2     | 72        | F0,72    | 2              | 32 | 2     | 32 | NUL     | 00 |
| 3     | 7A        | F0,7A    | 3              | 33 | 3     | 33 | NUL     | 00 |
| ENTER | E0,5A     | E0,F0,5A | ENTER          | 0D | ENTER | 0D | ENTER   | 0D |
| 0     | 70        | F0,70    | 0              | 30 | 0     | 30 | NUL     | 00 |
| .     |           |          |                |    |       |    |         |    |