

## INTERFACCIA PS/2 COMPUTER Z80NE – FW 3.3.0

### *Tasti WordStar*

Ins	^V	Toggles between insert and overwrite mode
Home	^Q + S	Moves the text cursor to the beginning of the line
Del	^G	Deletes the character to the right of the text cursor
End	^Q + D	Moves the text cursor to the end of the line
PgUp	^R	Page Up
PgDn	^C	Page Down
Up	^E	Moves the text cursor one line upward
Down	^X	Moves the text cursor one line downward
Left	^S	Moves the text cursor one position to the left
Right	^D	Moves the text cursor one position to the right
Ctrl + Del	^T	Deletes the part of the current word to the right of the text cursor. If the cursor is not on a word, all characters to the right of the cursor up to the start of the next word are deleted
Ctrl + Up	^W	Scrolls down one line. Cursor moves up one line unless it is already at the top
Ctrl + Down	^Z	Scrolls up one line. Cursor moves down one line unless it is already at the top
Ctrl + Left	^A	Moves the text cursor to the start of the previous word or the end of the previous line, whichever is closer
Ctrl + Right	^F	Moves the text cursor to the start of the next line or the end of the current line, whichever is closer

### *Tasti speciali*

Ctrl + L-Alt + Del	^_	Riavvio del sistema (RA3 -> /RESET)
L-Alt + F1		Cambia layout tastiera (IT -> US -> UK)
L-Alt + F2		Cambia modalità (NEDOS -> CPM/WS)
Ctrl + L-Alt + F10		Salva layout, modalità e stato NumLock
F1 ÷ F12	Esc + A ÷ Esc + L	Tasti funzione (solo in modalità CPM/WS)
L-Alt + AltGr	/NMI	BREAK (solo in modalità NEDOS)
Tab		LINE FEED se in modalità NEDOS HOR TAB se in modalità CPM/WS
Caps Lock		SHIFT LOCK se in modalità NEDOS CAPS LOCK se in modalità CPM/WS